homeward**b**ath

Chelsea Tub Model: MG015 Installation Manual



Table of Contents

General Information 1
Notice to Installers 1
Electrical Parameters 1
Electrical Requirements 1
Plumbing Requirements 1
Tub Installation 1
Installation of Drain 2
Operation of Bathtub2
Troubleshooting 3
Cleaning and Maintenance 3
Parts Request 4
Warranty Information 5
Notes
Customer Reviews 7

General Information

- **Note:** All tubs need to be leveled in its final resting position and have all feet touching the ground.
- It is advised to have tub onsite before preparing drain location.
- **Note:** Unit comes with a 1500 watt inline heater. The heater comes on automatically when the water pump is engaged.
- Manufacturer reserves the right to change specs or features at any time. Please check to confirm details. 1-866-783-2661

Notice to Installers

THE FLEXIBLE DRAIN HOSE THAT IS INCLUDED WITH THIS UNIT IS FOR INSTALLATION INTO AN OPEN FLOOR DRAIN ONLY. SUBSTITUTING THE EXISTING DRAIN SHOE FOR A DIFFERENT ONE WILL NOT VOID THE WARRANTY AS LONG AS THERE IS NO DAMAGE OR EVIDENCE OF MISUSE TO THE BASE.

Electrical Parameters

Rated Voltage	Frequency Motor Power					
110V~120V	60HZ	0.745KW(1HP)/1.0KW 5.5-6.5 Amps				
110V~120V	60HZ	1500 Watt / 13-14 Amps Inline Heater (Pre-wired)				

Electrical Requirements

- 1 dedicated 10-2 line for water pump (line 1, ground and neutral)
- 110 volt, 30 amp GFCI breaker
- There is a length of wire supplied to connect to power source
- Includes 1500 watt inline water heater


Plumbing Requirements

- The unit is equipped with hot and cold, metal braided ½ inch water supply hose with ½ national pipe thread.
- Need to install accessible hot and cold shutoffs with ½ -male national pipe thread (not included).
- Supply hoses are to connect from the manifold on the unit to the shutoff valves.
- All water jet features are pre plumbed with reinforced braided flexible supply hose
- All fixtures and fittings should be checked for tightness as they may have come loose during transport. Access panel area advised.


Tub Installation

- A. Water Head: One cold water supply pipe, one hot water supply pipe.
- B. Drainage: The diameter of the drain should be (greater than or equal to) 40mm. This drainage can be at a distance of 300-400mm from the location we show on the chart.

1. Unpack the bathtub and move it into the desired position. Adjust the tub feet so the water will drain completely from the tub. All feet need to be touching the floor and tub needs to be level.

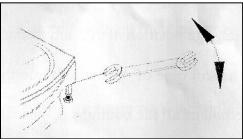

- 2. Install the hand held spray wand and the headrests.
- 3. Carefully ground the bathtub.

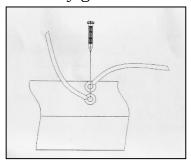


Installation of Drain

Floor drain must have trap installed.

Operation of Bathtub

- 1. Check the power supply and GFCI protection. Insert the plug into an interior power supply socket or hardwire to a junction box.
- 2. Turn on the cold and hot water shut off valves, and then turn on the handle of the cold and hot water faucet to mix the water to a desirable temperature.
- 3. Operation of the faucets: an on/off valve has been set for the shower and whirlpool bath. Turn diverter to switch between water faucet and sprayer functions.
- 4. Whirlpool bath massage: Turn valve on. Turn off the water when it reaches the water level. Water pump valve controls the whirlpool massage pump and jets.

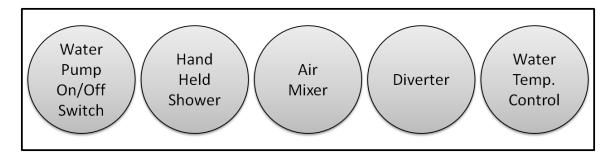

- 1. Drain water for about 10 minutes after installation to clear drain lines and test for water leaks.
- 2. After using, shut off water and power supply.

Troubleshooting

Trouble	Reason	Solution
No Power Supply	 Power plug is not connected to the socket Circuit breaker is not on 	 Tightly connect the plug with the socket. Find and remove short circuit, reconnect the protection switch.
Water pipe leaks	 Poor seal ring Poor joint connection Water pipe is broken 	 Replace Connect it again Replace
Tub light doesn't work	 Bulb is damaged Wires are cut off 	 Replace (remove the nut and install a new bulb, then tighten it) Connect the wire

Cleaning and Maintenance

- 1. Clean the bathtub with ordinary liquid detergent and a soft cloth. Don't sterilize the bathtub with cleaning products containing acetone or ammonia. Do not disinfect using agents with formic acid or formaldehyde.
- 2. If scratched treat the surface with an acrylic rubbing polish.
- 3. Wipe off the dirt and stains on surface with toothpaste and a soft cloth.
- 4. Grind the light scratches or stains with 2000# sand paper, and then polish with polishing wax.
- 5. If water is hard, it is suggested to clean the massage the device twice a year according to this following method:
 - a. Feed 40°C warm water into the bathtub until it reaches the lowest water level.
 - b. Mix 2g of liquid detergent for every liter of water, pour in and start the water force massage device and allow it to run for about 5 minutes.
 - c. Stop the water pump and drain out the water.
 - d. Fill the bathtub again with cold water and start the massage jets for about for 3 more minutes.
 - e. Stop the water pump, drain out the water, and clean the bathtub.

TO EXPEDITE PARTS REQUEST

Please visit homewardbath.com/support

If you require additional assistance, call 866-783-2661.

WARRANTY INFORMATION & REGISTRATION

Please visit our website: homewardbath.com/warranty-registration

Registration must be completed within **45 days** of receipt to be valid.

A full description of the warranty is available on the Homeward Bath website.

NOTES:			

CUSTOMER REVIEWS

Customer satisfaction is very important to us.

We would like to have your final installation picture(s) for publicity purposes.

Please send to: Marketing at: marketing@hwbpro.com

22900 Miles Rd Cleveland, OH 44128 Phone: 866-783-2661 Fax: 440-348-2336

www.homewardbath.com



homeward**b**ath